

# PRIMJER

## Digitalni termometar (alarmni) 12207



1. Programirajte donjnu temperaturnu granicu °C
2. Programirajte gornju temperaturnu granicu °C

1. Postavite uređaj s vanjske strane na rashladnu jedinicu (set za postavljanje uključen)



1. Vanjski senzor postavite u unutrašnjost rashladne jedinice
2. Aktivirajte alarm za postavljene temperaturne vrijednosti